


PRO-DESIGNED, INC.

Order by mail, or use **PayPal** at our website!

"World's Best Knee and Elbow Pads"

P.O. Box 925213 • Houston, Texas • 77292
 Phone (713) 957-0341 • Fax (713) 683-6710
 www.prodesigned.com

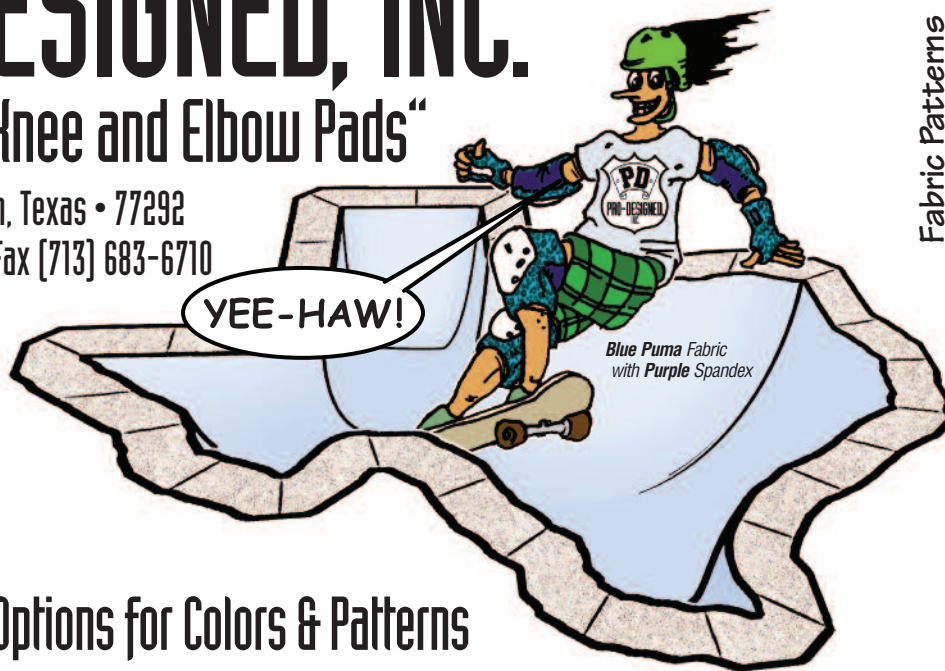


Fabric Patterns




Options for Colors & Patterns

Spandex Colors

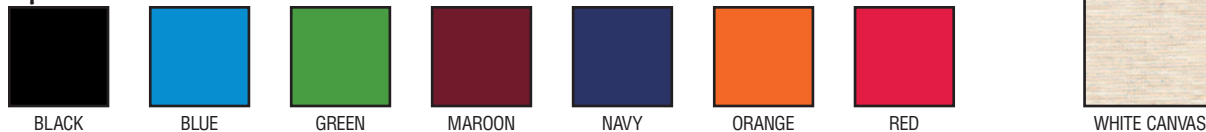


Taking Custom Measurements for Knee Pads

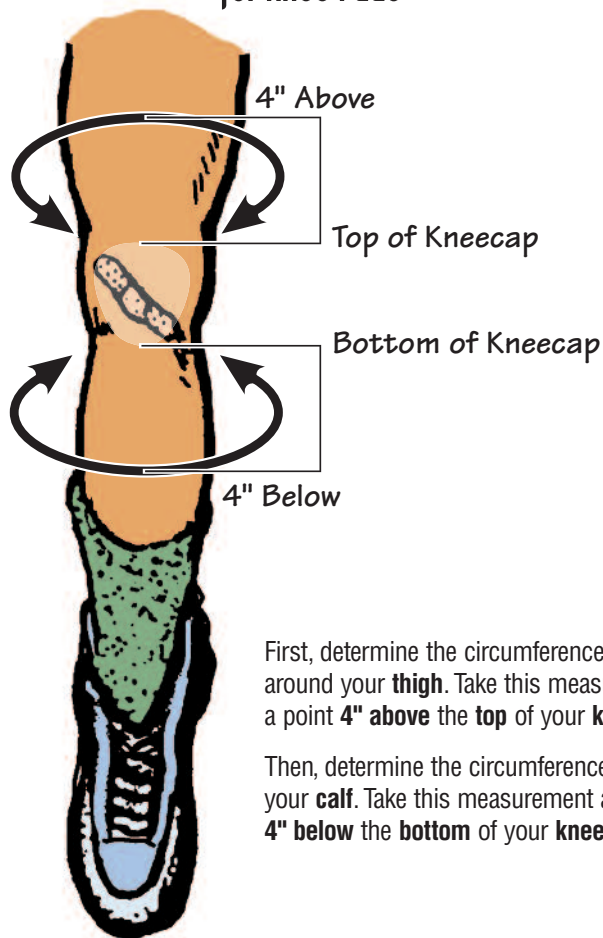

First, determine the circumference completely around your **thigh**. Take this measurement at a point **4" above** the **top** of your **kneecap**.
 Then, determine the circumference around your **calf**. Take this measurement at a point **4" below** the **bottom** of your **kneecap**.

... or for Elbow Pads

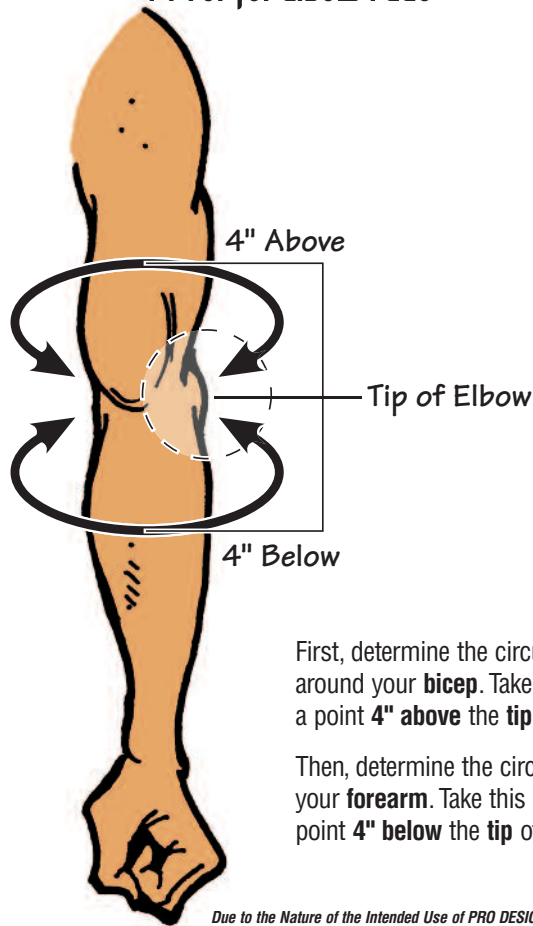

First, determine the circumference completely around your **bicep**. Take this measurement at a point **4" above** the **tip** of your **elbow**.
 Then, determine the circumference around your **forearm**. Take this measurement at a point **4" below** the **tip** of your **elbow**.